

**CAUTION**

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

GENERAL

Read all instructions carefully for safe operation and installation.

All electrical connections must be in accordance with local and national electrical code (N.E.C.) standards.

Remove the fixture and mounting package from the box. Make sure no parts are missing by referencing the illustrations on these Installation Instructions. Please contact Blackjack Lighting at 847-941-0588 if any parts are missing or damaged. This product is suitable for WET locations.

PREPARATION

1. Remove the fixture from its box.
2. Pull the supply(2&4) and the house ground(6) wires from the outlet box(1) and thread them through the large center hole in the ceiling plate(10).

ELECTRICAL CONNECTIONS

3. Using the wire connectors(8), connect the white supply wire(2) to the white fixture wire(3); connect the black supply wire(5) to the black fixture wire(4); and connect the house ground wire(6) to the fixture ground wire(7). Tuck the wires back into the outlet box(1).

MOUNTING

3. Attach the ceiling plate(10) to the outlet box(1) with the two mounting screws(9).
4. Feed the aircraft cables(16) through the grippers(15)(attached to the canopy cover(11))and adjust them to the required lengths. Adjust the three suspension aircraft cables(16) to the appropriate length by either pushing the individual cable up into the adjustable gripper(15) or by pushing the small barrel upward (located on the bottom of the adjustable gripper(15)). This will release the tension and allow the suspended cable(16) to increase in length.
5. Loosen the strain relief screw(14)(attached to the canopy cover(11)) and adjust the wire(17) to the required length. Feed the wire through the strain relief(14), then wind the excess wire(17) into a loop inside the canopy cover(11) and secure it with the included Velcro strap so that the loop doesn't come undone. Cut electrical wire(17) as needed.

ELECTRICAL CONNECTIONS

6. Using the wire connectors(8), connect the white supply wire(2) to the white fixture wire(3); connect the black supply wire(5) to the black fixture wire(4); and connect the house ground wire(6) to the fixture ground wire(7). Carefully tuck all the wires back into the outlet box(1).
7. To attach the canopy cover(11) to the ceiling plate(10) align the two holes on the bottom of the canopy cover(11) with the threaded standoffs(13) attached to the inside of the ceiling plate(10). Then insert and tighten the two thumbscrews(12) into the standoffs(13) to secure everything in place.

FINAL ASSEMBLY

8. Insert the lightbulb (not included) into the fixture socket.

DIMMING

Fixture Dimming Type: E26 socket has no dimming options.

HARDWARE




Wire Connector (#8)
(3 included)



Mounting Screw (#9)
(2 included)



Thumb Screws (#12)
(2 included)

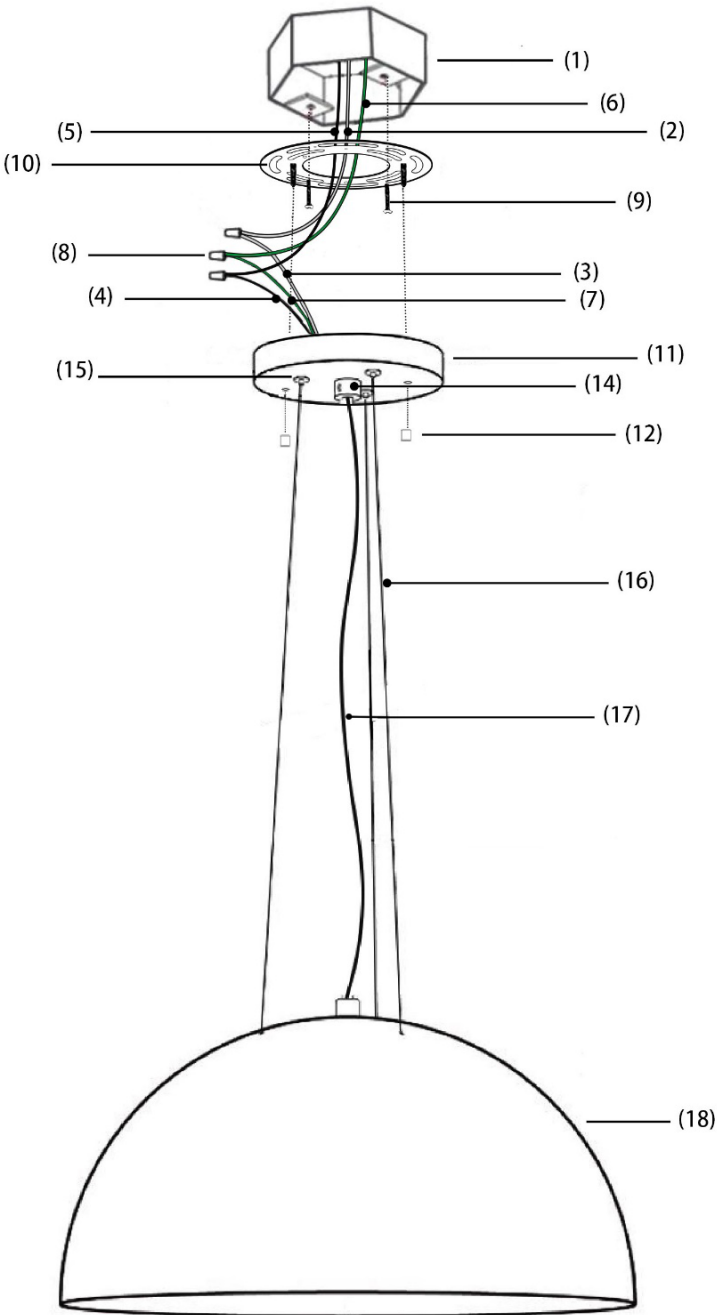

1. OUTLET BOX (BY OTHERS)
2. WHITE SUPPLY WIRE
3. WHITE FIXTURE WIRE
4. BLACK FIXTURE WIRE
5. BLACK SUPPLY WIRE
6. HOUSE GROUND WIRE
7. FIXTURE GROUND WIRE
8. WIRE CONNECTORS
9. MOUNTING SCREWS
10. CEILING PLATE
11. CANOPY COVER
12. THUMB SCREWS
13. THREADED STANDOFF
14. STRAIN RELIEF SCREW
15. GRIPPER
16. AIRCRAFT CABLES
17. ELECTRICAL WIRE
18. SHADE