

Solo Modular System- Stem Mounted MS-24xx, MS-48xx (5/ 11 port)

CAUTION

TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING THE FIXTURE IN ORDER TO PREVENT POSSIBLE SHOCK

IF YOU ARE UNFAMILIAR WITH PROPER ELECTRICAL WIRING CONNECTIONS OBTAIN THE SERVICES OF A QUALIFIED ELECTRICIAN

GENERAL

- Read all instructions carefully for safe operation and installation.
- All electrical connections must be in accordance with local and national electrical code (N.E.C) standards.
- Remove the fixture and any additional package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions. Please contact Blackjack Lighting if any parts are missing or damaged.
- This product is suitable for damp locations.

INSTALLATION

1- PREPARATION

- Remove the fixture from its box. Unpack the bundled wire packages, be careful not to bend or kink wires when unpacking. Remove additional packaging for light guides (2).
- Remove the channel (5) from the fixture pan (3) by loosening the two decorative finials (4).

2- STEM MOUNTING - (Remote/ Canopy Mounted Driver)

- A 47" or 23" length of channel (5) will require at least two stems (7) on the first channel (where power enters). A 47" length of channel will require two stems (7) for each additional channel connected in a row, and a 23" length of channel will require a minimum of one stem (7) when used as an additional channel in a row.
- Mount first stem:**
Thread the first stem (8) into channel (5) with 24V electrical cable (24) running through the stem, and tighten it firmly.
- Mount additional stems:**
Thread the non-powered stem(s) (7) into channel (5) and tighten them firmly with the threaded hex fasteners (21).

3A- ADD EXTERNAL JOINER AT END OF CHANNEL

- For connection to additional channel sections with an external joiner (11) either ("L" / "I" / "T" / "X" Joiner).
- Insert side support brackets (12) into the inner sides of the channel (5). Push the straight and the right-angle support brackets (12) into the channel (5) as far as it will go.
- Insert side support brackets (12) into the inner sides of the additional channel(s) (10) on the other side of the external joiner (11). Push the straight and the right-angle support brackets (12) into the channel(s) (10) as far as they will go.
- Attach back support bracket (13) of the selected external joiner (11) onto the two threaded studs at the end of the first channel (5) and the additional channel(s) (10). Install two nuts on each end of support bracket (13) and tighten down.

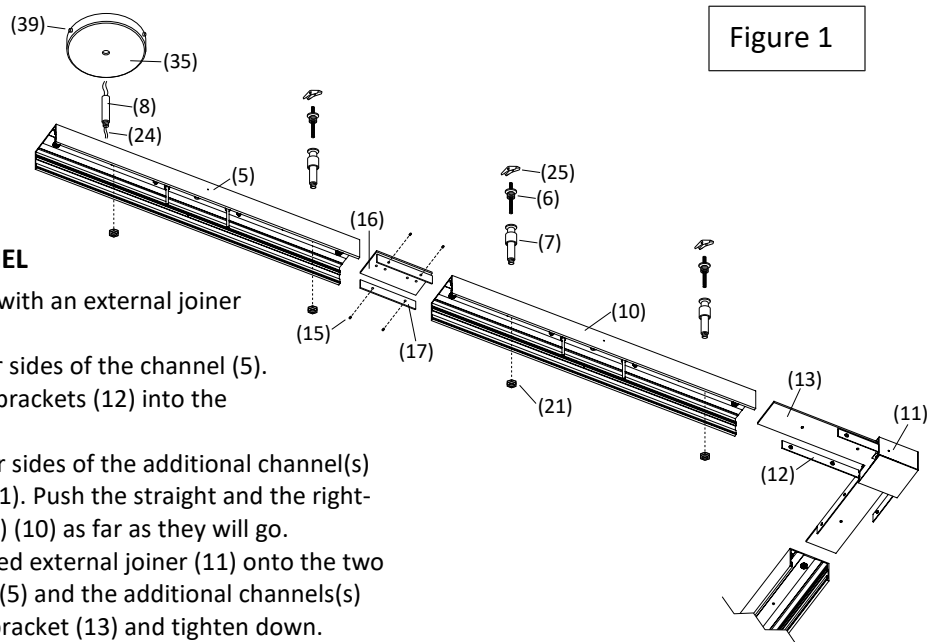


Figure 1

- e. Slide back the straight support bracket (12) into the external joiner (11) until the support bracket (12) is spaced half way into the channel (5) with the other portion inside the joiner (11)
- f. Lock both side support brackets in place in the channel(s) by tightening set screw (15). Tighten the set screws (15) inside the selected external joiner (11) so it meets tightly with the end of channel(s).

3B- ADD INTERNAL JOINER AT END OF CHANNEL

- a. For connection to additional channel sections (10) with an internal joiner (16)
- b. Attach one end of internal joiner (16) onto the two threaded studs at the end of the channel (5). Install two nuts and tighten.
- c. Insert side support brackets (17) into the inner sides of the first channel (5). Push them all the way into the channel (5)
- d. Mount the internal joiner (16) onto the two threaded studs on the additional channel (10). Install two nuts and tighten.
- e. Slide back the side support bracket (17) until they are spaced half way into the channel (5) with the other portion inside the additional channel (10). Tighten the remaining set screws (15) until fully tight.

4. INSTALL CANOPY BACKPLATE TO JUNCTION BOX

- a. Install the backplate (30,36 or 41) to the junction box (1).
- b. **For the junction box cover plate (29)** (for remote mounted drivers): pull the two electrical low voltage wires (28) from remote driver (22) through backplate. Install cover plate (29) so that side mounted screw hole is facing the same direction as the channel (5).
- c. **For the round canopies (35 or 40)** (for canopy mounted drivers): pull the line voltage supply wires (19) from junction box (1) through the backplate. Align the mounting screw holes in the backplate with the holes in the junction box (1). Insert and tighten the mounting screws (14) to attach them together. Attach the line voltage supply wires (19) from the junction box (1) to the input wires from the integral driver (33) using quick connector (27).

5. INSTALL STEM / ELECTRICAL WIRE ASSEMBLY TO CANOPY COVER

- a. Attach the top side of the stem (8) to the canopy (29,35 or 40) with the excess wire exiting into the canopy. Shorten electrical wire as required.
- b. Insert the low voltage wire (24) from the channel (5) through the ceiling canopy (29,35 or 40).

6. INSTALL STEM CEILING SUPPORTS

- a. Measure the distance between the first stem (8) (underneath the center of the canopy) and the next mounted stem (8). Then measure the distance between each of the remaining stems (8) along the channel (5). Mark the distance between the canopy center and the first stem on the ceiling. Then mark the rest of the measured stem locations in a straight line on the ceiling.
- b. Align the threaded stem top (6) with the marks made on the ceiling and mark the center hole location on the ceiling.
- c. Insert a ceiling anchor (25) rated to support at least 40 pounds to the ceiling mount location (anchor and fastener not included). It is recommended to use a No. 10 (3/16" dia.) toggle bolt ceiling anchor (in sheetrock applications) or a No. 10 round head screw (3/16" dia.) into a solid surface. Tighten the threaded stem top (6) until it rests firmly against the ceiling.

7. CONNECT ELECTRICITY

Attach the low voltage fixture wires (26) coming from the back of channel (5) through ceiling canopy (35 or 40) to the low voltage wire (18) coming from integrally mounted driver (20) in canopy using quick connector (27). Low voltage fixture wires can also be attached to the low voltage wires coming through the junction box (1) from remote mounted driver (22) (junction box cover plate (29)).

[NOTE: DO NOT CONNECT THE LOW VOLTAGE (24v) ELECTRICAL WIRING (24) COMING FROM THE CHANNEL (5) TO A LINE VOLTAGE (120-277v) INPUT FROM THE JUNCTION BOX (1)]

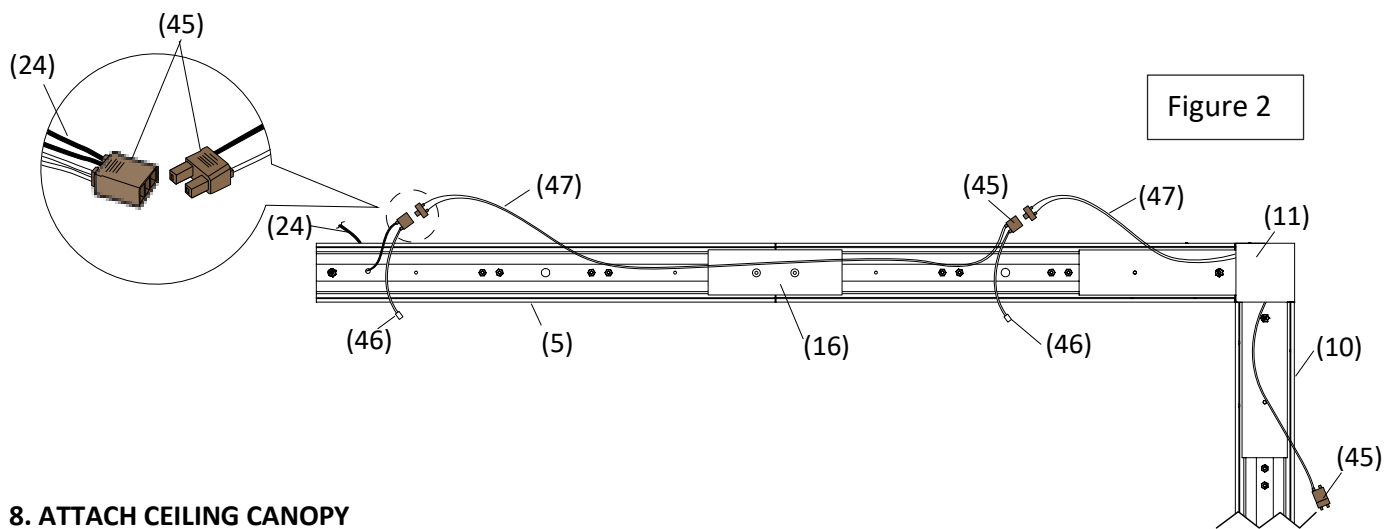


Figure 2

8. ATTACH CEILING CANOPY

- a. **For junction box cover plate;** align cover (29) to the threaded studs in backplate (30) Lock the front cover (29) to the backplate (30) by inserting and tightening the finials (31) to the backplate studs.
- b. **For shallow canopy;** Attach driver (20) and its rear disk (34) to the support bracket (37) with two screws (38). Push the front canopy (35) up to the canopy backplate (36) until the canopy is firmly positioned against the ceiling, and then lock into position with three side finials (39)
- c. **For deep canopy;** Secure the internal support bracket (42) to the canopy backplate (41) with the two finials (43) on either side. Then Install the two finials (44) holding the deep round cover plate (40) to the mounting bracket (42).

9. ATTACH STEM TO CEILING SUPPORTS

Mount each non powered stem (7) to the ceiling mount anchor (25) and hand fasten them together.

10. CONNECT THE INTERNAL CHANNEL WIRING CONNECTIONS

The low voltage wiring attached to the back of the channel (24) is attached to the male side of the brown low voltage connectors (45) Also attached is a white quick disconnect (46) used to transfer power to the pendant wire assembly. The female side of the brown connectors is located inside the channel (5) of the fixture and is attached to the 48" jumper wires (47) which carry low voltage power from one fixture to the next. Tighten the zip tie restraint on the jumper cable and attach to the brown connectors in the next channel. Once all the low voltage connections are made you can then suspend the fixture pan (3) from the internal suspension wires (hook and loop) (32) (located inside the fixture).

11. DETERMINE THE APPROPRIATE LENGTH OF EACH PENDANT

(if pendant is pre-configured; pendants will only require minor adjustments). Push the excess wire up into the canopy by pressing the small barrel of the gripper (23) upward. This will release the wire tension and allow the suspended wire to be pulled through gripper. Roll excess wire into a small loop inside the canopy. Wrap the supplied Velcro strap around this loop to keep the excess wire from falling outside the fixture pan (3).


12. CONNECT THE CANOPY COVER TO THE BACKPLATE

Make sure all wires are carefully placed inside fixture pan (3). Secure the fixture pan (3) to the channel (5) by tightening the two decorative finials (4).

13. FINE TUNE CABLES


- a. Once the canopy is in place, fine tune the wire lengths longer or shorter to get each pendant adjusted to its preferred length by adjusting the gripper (23). If pendants are prearranged by Blackjack, minor adjustments may be required. Each pendant has a screw in light guide (2) (shipped separately). Gently screw into place.
- b. Once the length of each wire has been established, any remaining bends or kinks in the wire can be straightened by bending out the kinks by hand while heating the cord up with the warm air from a hair dryer or heat gun. A handheld wire straightening kit can be provided by Blackjack (reference instructions provided with kit).

Figure 3

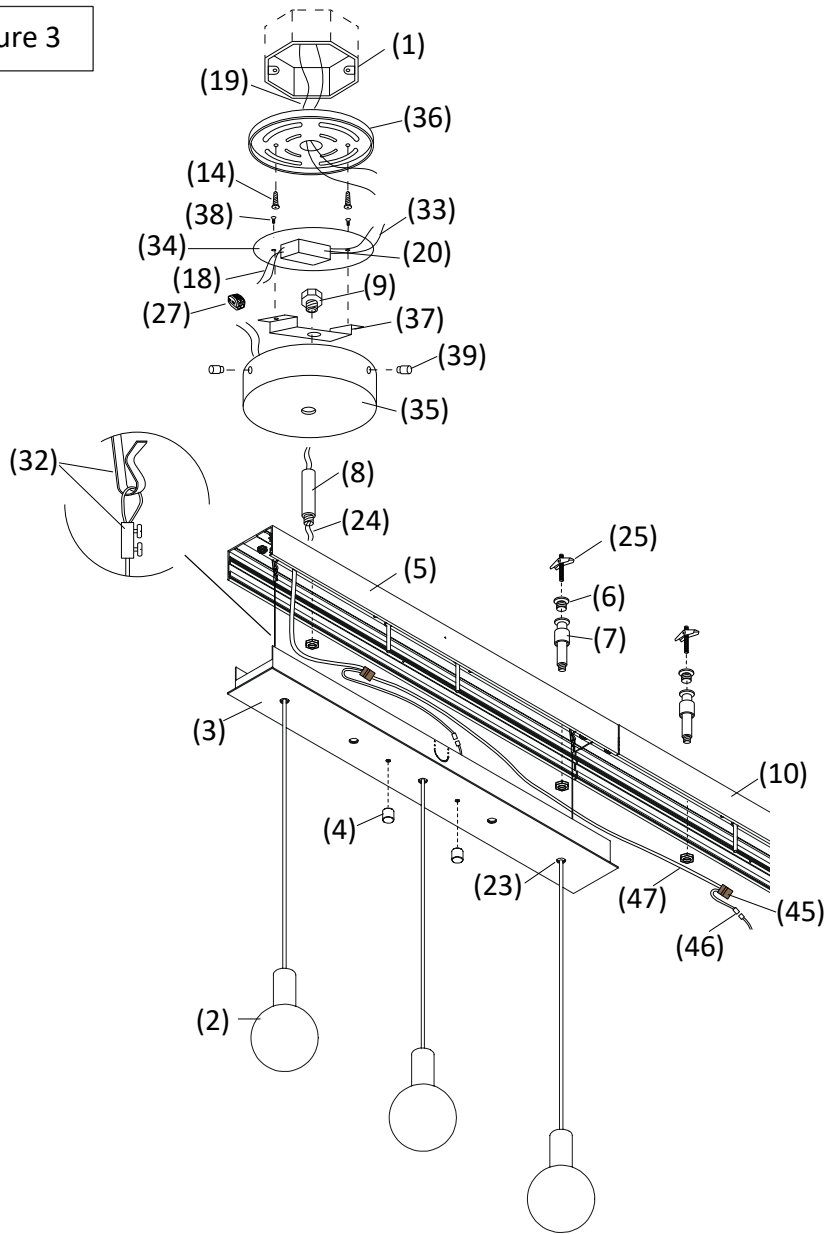


(MS-24xx Solo Module Shown)

Deep Round

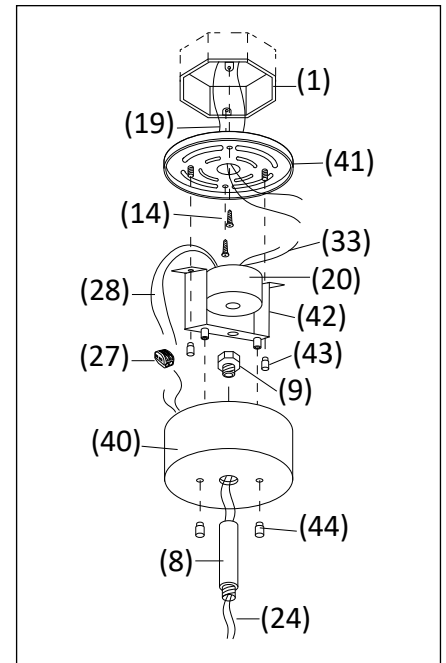

Junction Box Cover Plate

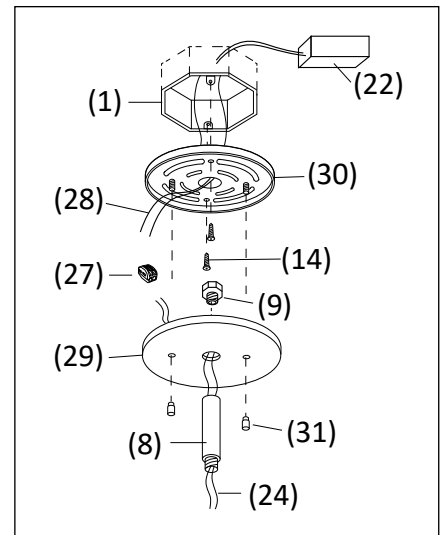

- | | | |
|--|--|---|
| 1. JUNCTION BOX (by others) | 17. INTERNAL JOINER SIDE SUPPORT BRACKET | 33. LINE VOLTAGE WIRES FROM INTEGRAL DRIVER |
| 2. LIGHT GUIDES | 18. 24V LOW VOLTAGE WIRES FROM INTEGRAL DRIVER | 34. SHALLOW CANOPY DRIVER PLATE |
| 3. FIXTURE PAN | 19. LINE VOLTAGE SUPPLY WIRES FROM J-BOX | 35. SHALLOW CANOPY COVER PLATE |
| 4. DECORATIVE FINIALS | 20. INTEGRAL DRIVER | 36. SHALLOW CANOPY BACKPLATE |
| 5. CHANNEL | 21. STEM THREADED HEX FASTENER | 37. SHALLOW CANOPY DRIVER SUPPORT BRACKET |
| 6. THREADED STEM TOP | 22. REMOTE DRIVER | 38. SUPPORT BRACKET SCREWS |
| 7. NON POWERED STEM | 23. PENDANT GRIPPER | 39. CANOPY SIDE FINIALS |
| 8. ELECTRICAL STEM | 24. 24V LOW VOLTAGE WIRES FROM CHANNEL | 40. DEEP CANOPY COVER PLATE |
| 9. ELECTRICAL STEM THREADED-CONNECTOR | 25. CEILING ANCHOR (by others) | 41. DEEP CANOPY BACKPLATE |
| 10. ADDITIONAL CHANNEL SECTIONS | 27. QUICK CONNECTOR | 42. DEEP CANOPY INTERNAL SUPPORT BRACKET |
| 11. EXTERNAL JOINER | 28. 24V LOW VOLTAGE WIRES FROM REMOTE DRIVER | 43. DEEP CANOPY INTERNAL FINIALS |
| 12. EXTERNAL JOINER SIDE SUPPORT BRACKET | 29. JUNCTION BOX COVER PLATE | 44. DEEP CANOPY DECORATIVE FINIALS |
| 13. EXTERNAL JOINER BACK SUPPORT BRACKET | 30. JUNCTION BOX COVER PLATE BACK PLATE | 45. BROWN LOW VOLTAGE CONNECTORS |
| 14. MOUNTING SCREWS | 31. JUNCTION BOX DECORATIVE FINIALS | 46. WHITE QUICK DISCONNECT |
| 15. SUPPORT BRACKET SET SCREW | 32. INTERNAL SUSPENSION WIRES/LOOP & HOOK | 47. 24V LOW VOLTAGE JUMPER WIRES |
| 16. INTERNAL JOINER | | |